

MITEL 5330e IP PHONE



- | | |
|---------------------------------|---------------------|
| 1 Display | Speaker |
| 2 Ring/Message Indicator | Mute |
| 3 Volume, Speaker/Mute Controls | Menu |
| 4 Fixed Function Keys | Cancel |
| 5 Keypad | Redial |
| 6 Page Navigation Keys | Hold |
| 7 Personal Keys | Transfer/Conference |
| 8 Speaker | Message |
| 9 Handset | |

¹ Brightness Control is available on backlit display models only.

NOTE: For more information about other features and applications on your 5330e IP Phone, refer to *5330e/5340e IP Phone User Guide* located at www.mitel.com, or contact your Administrator.

Make a Call

- 9 Lift the handset OR
- 3 Press .
- 5 Dial the number OR
- 7 Press a **Speed Call** key OR
- 4 Press OR
- 5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

- 9 Lift the handset OR
- 3 Press , and begin speaking.

End a Call

- 4 Press OR
- 9 Replace the handset.

Place a Call on Hold

- 4 Press . The line key flashes.
- 9 Replace the handset if necessary.

Retrieve a Call from Hold

- 9 Lift the handset OR
- 3 Press .
- 7 Press the flashing line key.

Retrieve a Message

- 4 Press . It flashes when a message is waiting.
- Follow the voice mail prompts to retrieve your message.

Transfer a Call

- 4 Press .
- Dial the number. Wait for an answer.
- Hang up OR announce the transfer and then hang up.

Conference a Call

- 4 Press .
- 5 Dial the number. Wait for an answer.
- 4 Press .

Program a Speed Call

- 4 Press **Menu** OR .
- Press **Settings**.
- Press **Programmable Keys**.
- Press the key you wish to program.
- Press **Speed Call**.
- Press **Edit Info** and enter the label for the Speed Call.
- Press **Save**.
- Press **Edit Number** and enter the phone number for the Speed Call.
- Press **Save**, and then press **Save** again.
- Press **Close** and then press **Close** again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume OR repeatedly to lower the volume.
- 3 Press to mute your microphone.

MITEL 5320e IP PHONE



- | | | | |
|---|--|--|---------------------|
| 1 | Display | | Speaker |
| 2 | Ring/Message Indicator | | Mute |
| 3 | Volume, Speaker and Mute Controls | | Menu |
| 4 | Fixed Function Keys | | Cancel |
| 5 | Dial Pad | | Redial |
| 6 | Navigation Page Keys | | Hold |
| 7 | Programmable Feature Keys and Softkeys | | Transfer/Conference |
| 8 | Speaker | | Message |
| 9 | Handset | | |

NOTE: For more information about using other features and applications on your 5320e IP Phone, refer to *5320e IP Phone User Guide* located at www.mitel.com, or contact your Administrator.

Make a Call

- 9 Lift the handset OR
- 3 Press
- 5 Dial the number OR
- 7 Press a **Speed Call** key OR
- 4 Press
- 5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

- 9 Lift the handset OR
- 3 Press , and begin speaking.

End a Call

- 4 Press
- 9 Replace the handset.

Place a Call on Hold

- 4 Press . The line key flashes.
- 9 Replace the handset if necessary.

Retrieve a Call from Hold

- 9 Lift the handset OR
- 3 Press
- 7 Press the flashing line key.

Retrieve a Message

- 4 Press . It flashes when a message is waiting.
- Follow the voice mail prompts to retrieve your message.

Transfer a Call

- 4 Press
- 5 Dial the number. Wait for an answer.
- 9 Hang up OR announce the transfer and then hang up.

Conference a Call

- 4 Press
- 5 Dial the number. Wait for an answer.
- 4 Press

Program a Speed Call

- 4 Press **Menu** OR . Press **Settings**. Press **Programmable Keys**. Press the key you wish to program. Press **Speed Call**. Press **Edit Info** and enter the label for the Speed Call. Press **Save**. Press **Edit Number** and enter the phone number for the Speed Call. Press **Save**, and then press **Save** again. Press **Close** and then press **Close** again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume OR repeatedly to lower the volume.
- 3 Press to mute your microphone.